


# SAFEONE DN3PR1

## Hardware

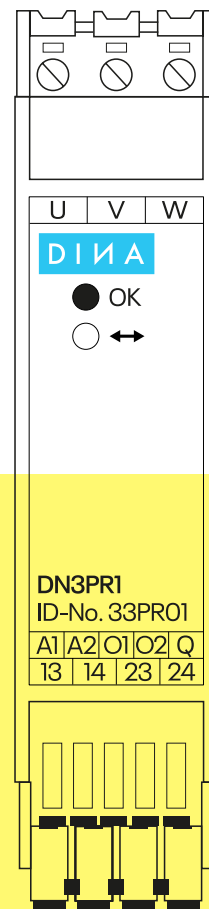

Safety module for sensorless detection  
of direction of rotation

**DINA Elektronik GmbH**

Esslinger Straße 84  
72649 Wolfschlugen  
Germany

**Phone** +49 7022 9517 0

**Fax** +49 7022 9517 700

**Mail** info@dina.de

**Web** www.dina.de

© Copyright by DINA Elektronik GmbH 2021

All parts of this documentation are protected by copyright.

Any use beyond that permitted under copyright law is not permitted without express written consent from the publisher. This applies in particular to the reproduction, distribution and translation of this documentation or parts thereof, as well as the storage and processing of this content using electronic data processing systems.

The information contained in this documentation corresponds to the technical state of the product at the time these operating instructions were published.

**Legal information**

Handbook:	Hardware
Target group:	Elektroniker, Elektrokonstrukteur
Editor:	DINA Elektronik GmbH
File name:	BA_dn3pr1_20210611
Language:	ENG
Publication as at:	11. June 2021

# Table of contents

<b>1</b>	<b>Structure of the document</b>	<b>5</b>
1.1	Conventions	5
1.1.1	Emphasizing information	5
1.1.2	Emphasizing paragraphs using typography	5
<b>2</b>	<b>Safety</b>	<b>7</b>
2.1	Warnings	7
2.1.1	Function of warnings	7
2.1.2	Design of warnings	7
2.1.3	Hazard symbols	8
2.2	Qualification of personnel	8
2.2.1	Electrician	8
2.2.2	Electrical designers	8
2.3	Intended use and improper use	9
2.3.1	Certification data	9
2.4	Documentation	10
2.5	Safety regulations	10
2.5.1	Retrofitting and conversion	11
2.5.2	Basic safety regulations	11
2.6	Working on live parts	12
<b>3</b>	<b>EC declaration of conformity</b>	<b>13</b>
<b>4</b>	<b>Function description</b>	<b>14</b>
4.1	Acknowledge Input	14
4.2	Signal outputs	14
4.4	Pin assignment	15
4.5	Block diagram	16
<b>5</b>	<b>Launch</b>	<b>16</b>
<b>6</b>	<b>Diagnostics</b>	<b>17</b>
<b>7</b>	<b>Example of application</b>	<b>19</b>
<b>8</b>	<b>Order data</b>	<b>20</b>

<b>9</b>	<b>Technical data</b>	<b>20</b>
9.1	Operating	20
9.2	Digital inputs	20
9.3	Measuring inputs	20
9.4	Signal outputs	21
9.5	Contact outputs	21
9.6	General data	22
9.7	Connection data	22
9.8	Environmental conditions	22
9.9	Dimensions	23
9.10	Safety-related parameters in accordance with DIN EN ISO 13849-1:2016-06	23
9.11	Relay load curve	23
<b>10</b>	<b>Installation and removal</b>	<b>24</b>
10.1	Installation a module	24
10.1.1	Overview	24
10.2	Removing module	24

# 1 Structure of the document

## 1.1 Conventions

Information of particular importance is emphasized in this documentation through the use of symbols, typography or formulations.

### 1.1.1 Emphasizing information

The following symbols indicate important information:



Degree of hazard (e. g. **WARNING**):  
Triangular symbols indicate the degree of hazard in warnings.



Type of hazard (e.g. **electrical shock – dangerous voltage**):  
Triangular symbols indicate the type of hazard in warnings.



**Information:** Additional clarification



**Tip:** Additional information to help optimize the workflow.

### 1.1.2 Emphasizing paragraphs using typography

The following typography is used to emphasize paragraphs with special functions:



Indicates an instruction.



Indicates an expected reaction.



Indicates an unexpected reaction.



Indicates an item in a list.

### 1.1.3 Emphasizing words using typography

The following typography is used to emphasize words with special functions:



Represents a numbered item in a figure.



Indicates a cross-reference to another page, figure or document.

## 1.2 We value your opinion!

We do all we can to provide complete, accurate documentation for the product. If you have any suggestions for improvement or advice for us, please share your thoughts with us. Send us your comments by e-mail to the following address.

**E-Mail: [info@dina.de](mailto:info@dina.de)**

## 2 Safety

### 2.1 Warnings

#### 2.1.1 Function of warnings

Warnings warn users about hazards when handling the product. The hazards are classified, specified, described and supplemented with information about how to avoid them.

- If there is a warning before a list of instructions, the hazard is present throughout the entire activity.
- If there is a warning immediately before an instruction, the hazard is present during the next step.

#### 2.1.2 Design of warnings

All warnings are indicated by a signal word and a warning symbol. The different combinations of the signal word and warning symbol indicate the degree of danger.



#### **DANGER**

For an immediate hazard that will result in severe injuries or death.



#### **WARNING**

For an immediate hazard that could result in severe injuries or death.



#### **CAUTION**

For a potentially hazardous situation that could result in injuries.



#### **CAUTION**

For a potentially harmful situation in which the product or an item near it could be damaged.



#### **CAUTION**

For a hazard that could cause environmental damage.

### 2.1.3 Hazard symbols



#### Note

The warning symbol may be present alongside another hazard symbol that represents the type of hazard, in order to attract the reader's attention.

Hazard symbols are indicated by a triangular symbol in the context of warnings. The following hazard symbols are used in this documentation:



**Electric shock – dangerous voltage!**

## 2.2 Qualification of personnel

**DINA Elektronik GmbH** distinguishes between specialist staff with different qualifications when it comes to carrying out work on the product. The minimum required qualifications are specified for each task and are defined as follows:

### 2.2.1 Electrician

Specialist who installs, maintains and repairs the electrical system in the product. A specialist is a person whose specialist training means that they have the knowledge and experience, including knowledge of relevant regulations, necessary to assess the work assigned to them and the potential hazards.



#### Note

When evaluating a person's specialist training, multiple years of work in the relevant field may also be taken into account.

→ **DIN VDE 1000-10** Requirements for persons working in a field of electrical engineering

### 2.2.2 Electrical designers

Specialists who design the electrical system and the product. A specialist is a person whose specialist training means that they have the knowledge and experience, including knowledge of relevant regulations, necessary to assess the work assigned to them and the potential hazards.



#### Note

When evaluating a person's specialist training, multiple years of work in the relevant field may also be taken into account.

→ **DIN VDE 1000-10** Requirements for persons working in a field of electrical engineering



## 2.3 Intended use and improper use

The product has exclusively been developed for use for the purpose described here. The specifications set out in these operating instructions must be strictly complied with.

- **DN3PR1 is a safety module for sensorless direction monitoring of three-phase asynchronous motors.**
- **The safety module is intended for use on machines and plants to prevent hazards from arising.**

Any other form of use is regarded as improper use.

If the product is

- **not used as intended,**
- **improperly maintained or**
- **incorrectly operated,**

the manufacturer will not assume any liability for any damage that results. In this case, the risk shall be borne exclusively by the user.

### 2.3.1 Certification data

The product is certified as safety equipment in accordance with:

DIN EN ISO 13849-1:2016-06,  
PL<sub>e</sub>, Sil 3, Kat. 3  
PL<sub>d</sub>, Sil 2, Kat. 3

In compliance with the following safety regulations:

#### **WARNING**



#### **To check for failure of a motor phase**

With PL<sub>e</sub>, Sil 3, Cat. 3: The motor must be switched torqueless for at least 5 s once a day.

With PL<sub>d</sub>, Sil 2, Cat. 3: The motor must be switched torqueless for at least 5 s once quarterly.

## 2.4 Documentation

Operating instructions contain instructions on how to use a product safely, correctly and cost-effectively. Follow the instructions in these operating instructions in order to prevent hazards, avoid repair costs and standstill, and improve the reliability and service life of the product. You must read the documentation and ensure that you understand them.



- ▶ Before working with the product, read the documentation that come with the product.
- ▶ Always ensure that the documentation is available where the product is in use.

## 2.5 Safety regulations

The safety regulations listed below must always be complied with. In the event that these safety regulations are not complied with or the device is used improperly, **DINA Elektronik GmbH** accepts no liability for any resulting injury or damage.

- **The product must only be installed and commissioned by a skilled electrician or a trained, instructed person, who is familiar with these operating instructions and the applicable specifications regarding occupational health and safety and accident prevention.**

### WARNING



**Danger to persons and materials!** In the event that specifications are not complied with, this can result in death, severe injuries or significant material damage.

- ▶ Observe VDE, EN and local regulations, in particular with regard to protective measures.
- **If the emergency stop is used, either the integrated restart prevention function must be used or the machine must be prevented from restarting automatically using a superordinate control system.**
- **When installing the device, the required distances as per DIN EN 50274, VDE 0660514 must be taken into account.**
- ▶ During transport, storage and operation, comply with the conditions set out in EN 60068-2-1, 2-2.
- ▶ Assemble the device in a control cabinet with at least IP54 degree of protection. Otherwise, dust and moisture can impair the functions. The device must be installed in a control cabinet.
- ▶ Ensure that the output contacts have sufficient protective circuitry for capacitive and inductive loads.
- ▶ Follow the specifications in the general technical data.



**Note**

More detailed information can be found in the **R Technical data** section.



**WARNING**

**Electric shock – dangerous voltage!** During operation, switching devices conduct dangerous voltages.



Never remove protective covers from electrical switching devices during operation.

► Replace the device the first time a fault occurs.



Dispose of the device in accordance with nationally applicable environmental regulations.

## 2.5.1 Retrofitting and conversion

- Unauthorized conversion voids any warranty. This can cause hazards that can lead to severe or even fatal injury.

## 2.5.2 Basic safety regulations

The safety regulations listed below must always be complied with. In the event that these safety regulations are not complied with or the device is used improperly, **DINA Elektronik GmbH** accepts no liability for any resulting injury or damage.

- The product described here has been developed to perform safety-related functions as part of an entire system.
- The entire system is made up of sensors, analysis units, reporting units and safe switch-off concepts.
- It is the manufacturer's responsibility to ensure that a system or machine is functioning correctly as a whole.
- The manufacturer of the system is obligated to check and document the efficacy of the implemented safety concept within the entire system. This documentation must be produced again every time the safety concept or safety parameters are modified.
- The manufacturer's specifications for the system or machine with regard to maintenance intervals must be complied with.

- **DINA Elektronik GmbH** is not able to make any guarantees regarding the properties of an overall system not designed by the company.
- **DINA Elektronik GmbH** accepts no liability for any recommendations given or implied in the following description.
- No new guarantee, warranty or liability claims that go beyond **DINA Elektronik GmbH's** general delivery conditions can be derived from the following description.
- To prevent EMC disturbances, the physical environmental and operating conditions where the product is installed must correspond to the EMC section of DIN EN 60204-1.
- If contact outputs are used, the safety function must be requested at least once per month for Performance Level (e) and once per year for Performance Level (d).

## 2.6 Working on live parts

### WARNING

**Electric shock – dangerous voltage!** Touching live components can cause severe or even fatal injury, depending on circumstances, as a result of an electric shock.




- ▶ Never assume that a circuit is dead.



- ▶ Always check circuits as a safety precaution! Components being worked on may only be live if this is absolutely necessary and stipulated.
- ▶ Accident prevention regulations (e.g. VBG4 and VDE 105) must be observed during all work.
- ▶ Only use suitable, intact tools and measuring equipment.

# 3 EC declaration of conformity

<b>DINA</b>	
<h2>Original EG-Konformitätserklärung</h2> <p>(gemäß der Richtlinie 2006/42/EG, Anhang II, IA)</p> <h2>Original EC-Declaration of Conformity</h2> <p>(according to Directive 2006/42 / EC, Annex II, IA)</p>	
<p>DINA Elektronik GmbH          Esslinger Str. 84          72649 Wolfschlugen          Deutschland</p>	
<p>Wir erklären, dass folgendes Produkt allen einschlägigen Bestimmungen der Richtlinie 2006/42/EG entspricht.          We declare, that the following product fulfils all the relevant provisions of Directive 2006/42 / EC.</p>	
<b>Produkt/Product</b>	<b>Funktion/Function</b>
DN3PR1 Drehrichtungswächter ohne Sensorik/ direction monitoring without sensor ID-No. 33PR01	Sensorlose Drehrichtungsüberwachung bei Dreiphasen-Motoren  Sensorless direction monitoring for 3-phases motors
<b>Weitere EU-Richtlinien/Further EC- directives</b>	
2014/30/EU EMV-Richtlinie/EMC-Directive 2011/65/EU RoHS Richtlinie/RoHS-Directive	
<b>Benannte Stelle/Notified Body</b>	<b>EG Baumusterprüfbescheinigung/EC Type-Examination certificate</b>
TÜV Rheinland Industrie Service GmbH Am Grauen Stein 51105 Köln Germany NB 0035	Reg.-Nr./No.: 01/205/5832.00/21
<b>Bevollmächtigter für die Zusammenstellung der technischen Unterlagen/ Authorized representative for the compilation of the technical documents</b>	
DINA Elektronik GmbH Esslinger Str. 84 72649 Wolfschlugen Deutschland	
	
Stefan Najib Geschäftsführer/CEO	Wolfschlugen, 06.11.2020

## 4 Function description

The two-channel evaluation unit of the safety module measures the frequency of the rotating field on the motor at the measurement inputs U, V, W and evaluates the direction of rotation based on the phase position of the motor drive voltage U, V, W.

A change in the direction of rotation changes the switching status of the enabling current path 13/14, 23/24.

Operation on electrical power drive systems with adjustable speed is possible. Operation on a single-phase motor is not possible.



### WARNING

The device is only suitable for asynchronous motors. When using frequency converters, the supply voltage of 277V AC (480V AC phase to phase) must not be exceeded.



### Note

The direction monitoring takes place in the frequency range 5 Hz to 100 Hz.

The enabling current path remains switched on at frequencies <5Hz. At frequencies > 100Hz, the previous state of the outputs is retained.

### 4.1 Acknowledge Input

The acknowledgment input enables the enabling current path to be switched on.

The start takes place with a falling edge of a 24V signal. The start signal is subject to time monitoring. The 24V signal must be present at input Q for at least 200ms and a maximum of 10s.

### 4.2 Signal outputs

You can use the signal outputs O1 and O2 to control e.c. a non-safety PLC or signal units.


The message outputs have the following properties:

- 24V, digital
- potential-bound
- short circuit and overload protection
- not safety-related

The output O1 indicates the state of the enabling current path.




The output O2 indicates the operational readiness. This switches off in case of an error.

### 4.3 LED-Display










The safety switchgear indicates its operational readiness and the status of the enabling current path by the two-color LEDs „OK“ and .

The module is ready for operation when the OK LED lights up green.  
The red flashing LED "OK" indicates an error.


**Legend**


	LED on
	LED off
	LED flashing

**SAFEONE DN3PR1 Status**


LED OK	LED 	Status
		Enabling current path closed
		Enabling current path open
		<b>Error</b> Enabling current path open
		<b>Device defective</b> Enabling current path open

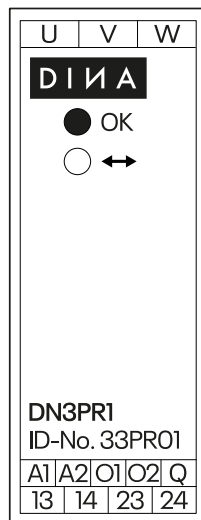


### 4.4 Pin assignment



U, V, W	Measuring inputs are to be connected directly to the motor, without switching contacts between.
A1	Power supply +24V DC
A2	Power supply 0V
Q	Acknowledgment input for manual, monitored starting.
O1, O2	Digital positive switching semiconductor outputs for the transmission of switching states to a higher-level control for diagnostic tasks.
13-14/23-24	Enabling contacts (2 NO-contacts)
OK-LED	Operational readiness
	State of the enabling current path 13-14/23-24
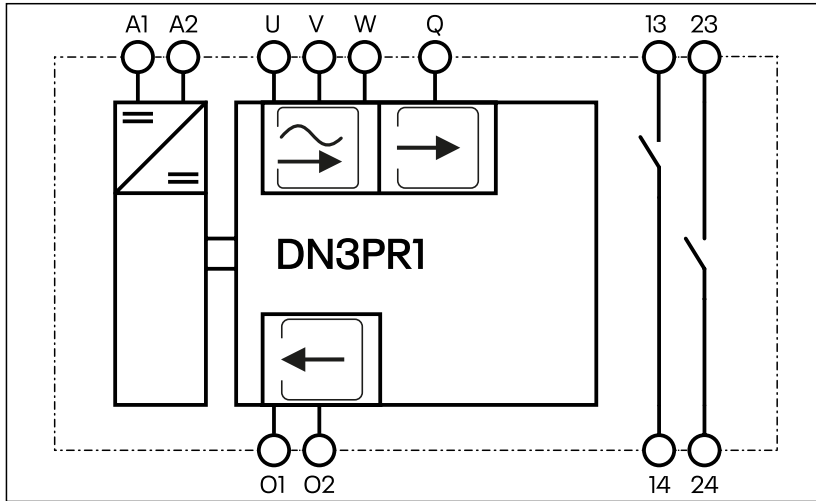
## 4.5 Block diagram



-  Measuring inputs
-  Inputs
-  Outputs



## 5 Launch

- ▶ Disconnect the device from the power supply before starting work.
- ▶ Wire the device according to the intended use.

After applying the operating voltage (24 V DC) to terminals A1 and A2, the safety relay will operate a self-test. The safety relay is in safe condition for the duration of the self-test. All enabling current paths are open.

After a successful self-test, the device is ready for operation. The LED OK lights up green.

- ▶ Start the drive and acknowledge via the acknowledgment input.
- ▶ Check whether the enabling current path switches on in the desired direction of rotation and switches off in the opposite direction. The switching states can be changed by swapping phases U and V.



### CAUTION

The drive must not be able to brake within 20ms at a speed corresponding to 100Hz, to change the direction of rotation and back to 100Hz accordingly to accelerate.



### CAUTION


Note that the method of frequency measurement does not recognize a mechanically blocked motor or an overloaded motor!

## 6 Diagnostics

The safety switching device shows diagnosed errors that lead to a safe condition of the device by means of a flashing code of the "OK" LED on the device.

The flashing code is repeated continuously with a pause of 1 s.

The meaning of the individual flashing codes can be found in the table.

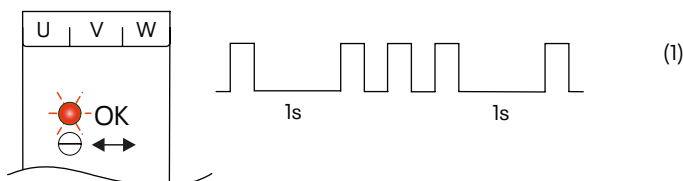

Code	Meaning	Remedy
1 x flash	Incorrect power supply	▶ Check power supply UB = 20.5V-26,5V DC
2 x flash	Parameter-/EEPROM-/ Check sum error	▶ Restart the device or send the device to DINA Elektronik.
3 x flash	Incorrect acknowledge signal at input Q	▶ Check the wiring at input Q for cross or short circuits. <b>For manual acknowledgment:</b> ▶ Check whether the start signal is within the time range of min. 200ms to max. 10s.
4 x flash	Open circuit on U, V, W	▶ Check the wiring at the measuring inputs for <ul style="list-style-type: none"> <li>• Short circuit</li> <li>• Cross-connection</li> <li>• Wire break</li> </ul>
5 x flash	Error phase shift	▶ Check the wiring at the measuring inputs for <ul style="list-style-type: none"> <li>• Wire break</li> </ul>
6 x flash	Relay error	▶ Send the device to DINA Elektronik for testing.
7 x flash	Single-channel error	▶ Check the wiring at the measuring inputs for <ul style="list-style-type: none"> <li>• Short circuit</li> <li>• Cross-connection</li> <li>• Wire break</li> </ul>
8 x flash	Frequency > 1500Hz	▶ Check the frequency at the measuring inputs. The working range goes up to 1200Hz.
9x flash	Frequency of direction changes too great.	▶ Check the wiring at the measuring inputs for <ul style="list-style-type: none"> <li>• Short circuit</li> <li>• Cross-connection</li> <li>• Wire break</li> </ul>
10x flash	Coast failure: The frequency measured last was > 50Hz	The motor signals were switched off abruptly. ▶ Check that the converter is ready for operation.
11x flash	Internal error	▶ Send the device to DINA Elektronik for testing
12x flash	Internal error	▶ Send the device to DINA Elektronik for testing

# 7 Example of application

**Measuring inputs**

The measurement inputs U, V, W of the DN3PR1 are directly connected to the three phases of the motor M.

**Switch off safely**


When the DN3PR1 detects a change of direction, the enabling current paths 13/14, 23/24 open and shut down the motor in a safety-related manner.

**Resetting the safety function**

The acknowledgment button S1 is used to reset the safety function after the motor turns again in the preferred direction.

**Monitoring of external contactors**

The external, positively driven contactors K1, K2 are integrated in the start circuit of the safety switching device.

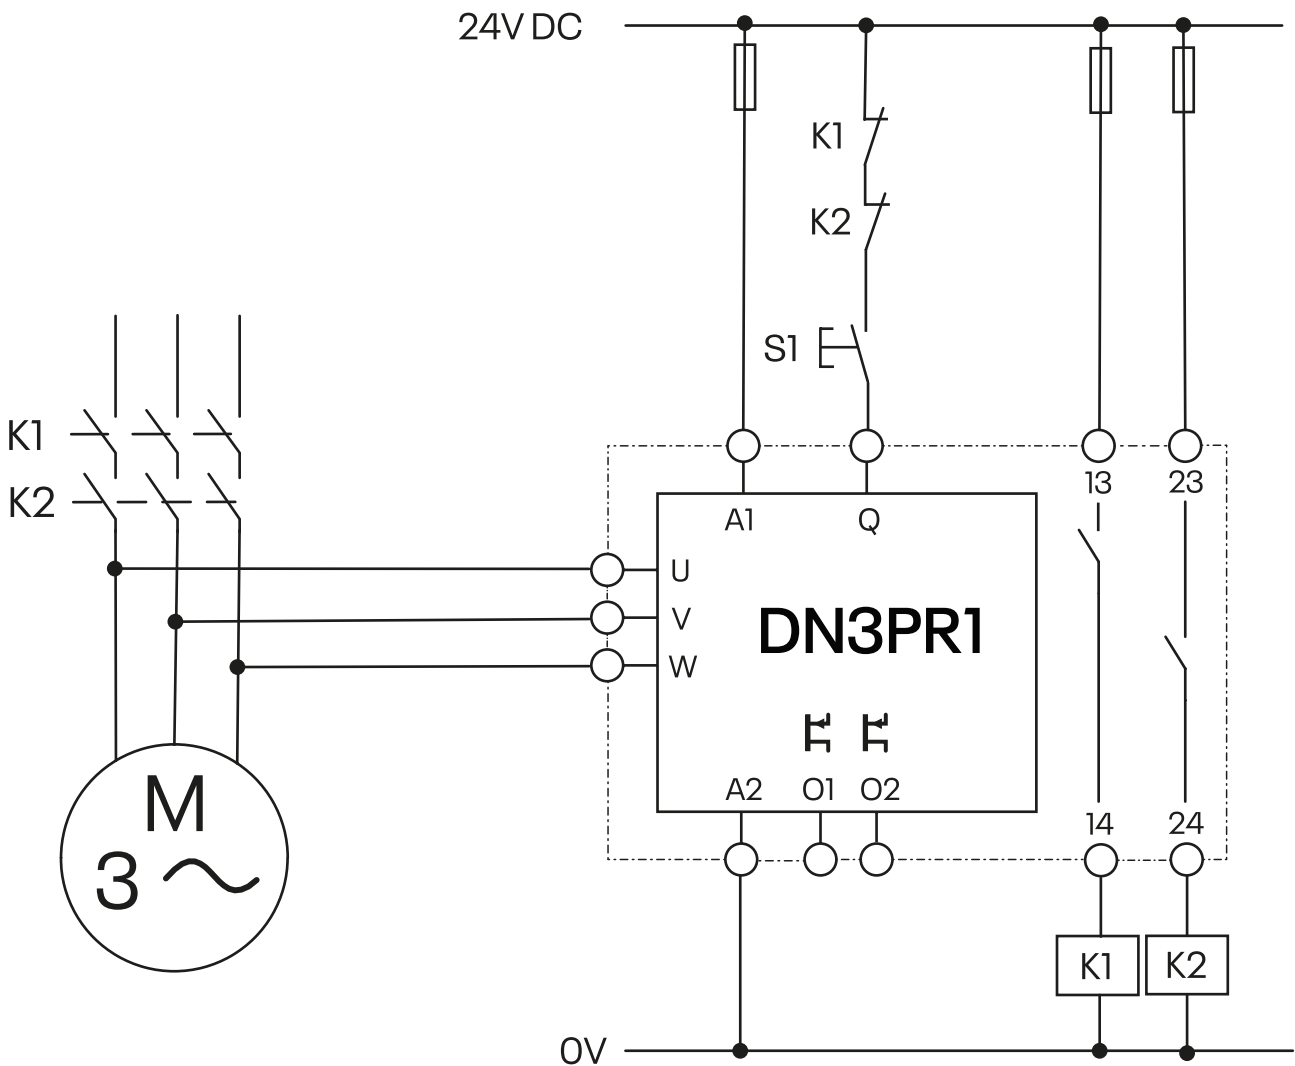

## 8 Order data

Description	Produkt	ID-No.
Sensorless direction detection, 2 contact outputs	DN3PR1	33PR01

## 9 Technical data

### 9.1 Operating

Operating voltage $U_B$	24 V DC (-15/+10%)
Current draw at 24V	80 mA
Power consumption at A1/A2	1,9 W

### 9.2 Digital inputs

Inputs	1 safety input Q
Voltage	24V DC (-15/+10%)
Current	< 5,0 mA
Power consumption	typ. 4 mA (at $U_B$ )

### 9.3 Measuring inputs

Measuring inputs	U, V, W
Voltage	90V AC to 480V AC (phase to phase)
Power consumption	0,24mA to 480V AC
Maximum frequency	1200Hz

Detection of rotation direction	>5Hz to 100Hz, two signal periods
Minimum-PWM	1kHz

## 9.4 Signal outputs

Outputs	O1, O2 unsafety
Voltage	UB - 1V
Max. current	≤ 100mA, shot-circuit and overload protection

## 9.5 Contact outputs

Outputs	13/14, 23/24
Contact material	AgSnO <sub>2</sub>
Operating voltage	24V DC / 230V AC
Minimum switching current	3 mA/ 24V DC
Maximum switching current	6A / 24V DC / 230V AC
Short-circuit strength	1000A SCPD 6A gL/gG
Mechanical life	10 <sup>7</sup> switching cycles
Switch-off time	2x (period (reciprocal value of the set frequency) + max. 2ms cycle time) + max 10ms relay switch-on time
Process safety time	1,8 s
Contact fuse	6 A gL/gG
B10d values acc. to DIN EN 61810-2-1, 01.2012	<b>AC15:</b> 5A/230V AC, >2x10 <sup>5</sup> switching cycles <b>AC1:</b> 6A/230V AC, >2x10 <sup>5</sup> switching cycles <b>DC13:</b> 4A/24V DC, >3x10 <sup>5</sup> switching cycles <b>DC1:</b> 6A/ 24V DC, >7x10 <sup>6</sup> switching cycles

## 9.6 General data

Type of protection(housing and terminals)	IP 20
Type of protection (place of installation)	min. IP 54
Air and creepage distances	acc. DIN EN 50178
Rated insulation voltage	400V AC to ground 690V AC phase to phase
Rated surge voltage / insulation	<b>Basic insulation 6kV:</b> between all current paths and housing.  <b>Safe insulation, reinforced insulation 8kV:</b> between U, V, W and A1, A2, O1, O2, Q between U, V, W and 13/14, 23/24
Degree of contamination	2
Overvoltage category	III
Housing material	Polyamid (PA), not reinforced

## 9.7 Connection data

Terminals	Push-in terminals		Screw
Number of positions	4	5	3
Connection cross-section	0,25 – 2,5mm <sup>2</sup>	0,25 -1,5mm <sup>2</sup>	0,25 – 2,5mm <sup>2</sup>
Connection cross-section AWG	24...12	24...16	24...12
Tightening torque	-	-	0,5Nm/0,6Nm
Connection wire	Only 60/75°C copper		

## 9.8 Environmental conditions

Operating temperature	-20°C to +55°C
-----------------------	----------------

Storage temperature	-40 °C to +85 °C
Altitude of place of use	< 2000m above sea level
Output relay shock resistance	10-150Hz, 1g
Vibration resistance	15g

## 9.9 Dimensions


B x H x T	22,5 x 114 x 111 mm (0.886 x 4.488 x 4.370 in)
Size of DIN rail	35,0 mm (1.378 in)
Weight	130 g

## 9.10 Safety-related parameters in accordance with DIN EN ISO 13849-1:2016-06

Utilization category	PFHd [h]	MTTFd [a]	DCavg
6A DC1 2 cycles/h	$4,91 \times 10^{-9}$	471	99%
4A DC13 2 cycles/h	$1,19 \times 10^{-8}$	203	99%
6A AC1 2 cycles/h	$1,16 \times 10^{-8}$	157	99%
5A AC15 2 cycles/h	$1,87 \times 10^{-8}$	157	99%

## 9.11 Relay load curve

Ohmic and inductive load for the enabling NO-contacts 13/14 und 23/24

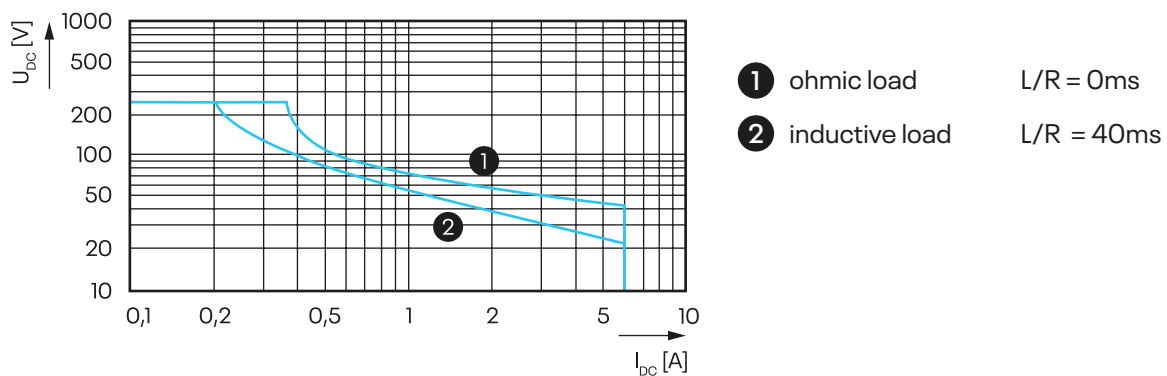

# 10 Installation and removal


## 10.1 Installation a module

### 10.1.1 Overview

- Ⓐ 70-75 mm (2,756-2,953 in)
- ① DIN rail
- ② Locking slider
- ③ Cable duct

#### Procedure

- ▶ Hook the module onto the top hat rail and press it downward.
- ◀ The locking slider ① engages under the rail.

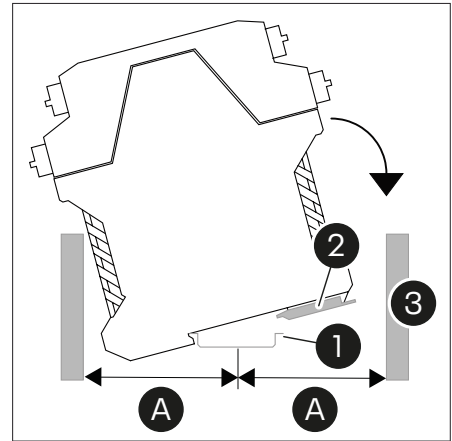

## 10.2 Removing module

#### Procedure

- ▶ Use a screwdriver ① to move the locking slider away from the module.
- ▶ Move the module upward and remove it from the rail.

